

HOW TO OPERATE YOUR HAYWARD EC-40 FILTER

1. STARTING THE FILTER

AFTER PLUGGING IN FILTER, ADD 1/2 BAG (4.5 OUNCES) OF FIBER CLEAR OR 4LBS OF D.E. THE FILTER POWDER SHOULD BE POURED SLOWLY INTO THE SKIMMER WHILE FILTER IS RUNNING.

2. HOW LONG SHOULD FILTER RUN EACH DAY?


YOUR EC-40 WILL FILTER 2400 GALLONS PER HOUR. IT IS RECOMMENDED THAT YOU TURN OVER THE WATER IN YOUR POOL AT LEAST TWICE A DAY (REFER TO CHART AT BOTTOM OF PAGE FOR YOUR POOLS CAPACITY). RUN FILTER MORE IN HOT WEATHER OR WITH HEAVY BATHER LOAD.

3. WHAT IS REGENERATION (BUMPING)?

WHEN RETURN PRESSURE (WATER FLOW) BECOMES WEAK OR THERE IS A SURGE IN THE PRESSURE GAUGE READING, IT IS TIME TO REGENERATE THE FILTER POWDER. TO DO THIS UNPLUG FILTER, THEN MOVE HANDLE AT TOP OF FILTER DOWN SLOWLY THEN UP QUICKLY. REPEAT 3 TIMES. PLUG IN FILTER AND FILTRATION WILL RESUME AT OR NEAR ORIGINAL PRESSURE. WHEN BUMPING HANDLE NO LONGER EXTENDS FILTER CYCLE IT MAY BE TIME TO BACKWASH THE FILTER.

4. WHAT IS BACKWASHING?

BACKWASHING COMPLETELY CLEARS FILTER OF DIRT, DEBRIS AND FILTER POWDER BY REVERSING THE FLOW OF WATER THROUGH THE FILTER. TO BACKWASH, SHUT OFF FILTER AND MOVE BUMP HANDLE AT TOP OF FILTER DOWN SLOWLY THEN UP BRISKLY. REPEAT 8 TIMES. OPEN DRAIN (BACKWASH VALVE) WHICH IS LOCATED AT BOTTOM OF FILTER TANK. ALLOW WATER TO RUN UNTIL CLEAR, CLOSE DRAIN AND FOLLOW INSTRUCTIONS FOR STARTING FILTER.

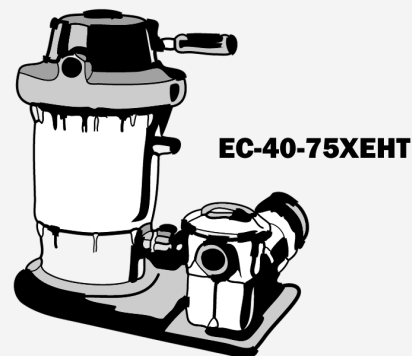

POOL SIZE ROUND	CAPACITY (GALLONS)
10 Round	2,000
12 Round	3,000
15 Round	5,000
18 Round	7,500
21 Round	10,000
24 Round	14,000
27 Round	18,000
30 Round	21,000

POOL SIZE OVAL	CAPACITY (GALLONS)
8x12, 8x14	3,000
8x19	3,500
10x15, 10x16	3,500
10x21, 12x18	5,000
12x24, 14x20	7,500
14x25, 15x24	10,000
15x30, 16x26	12,000
16x32	15,000
18x33	19,000

Staten Island's Largest Indoor Pool & Spa Showroom

STATEN ISLAND POOL & SPA

4820 Arthur Kill Rd.
Staten Island

718-605-9600